


Log Max 928

Spare parts manual / Reservdelsmanual


6. Saw unit / Sågenhet

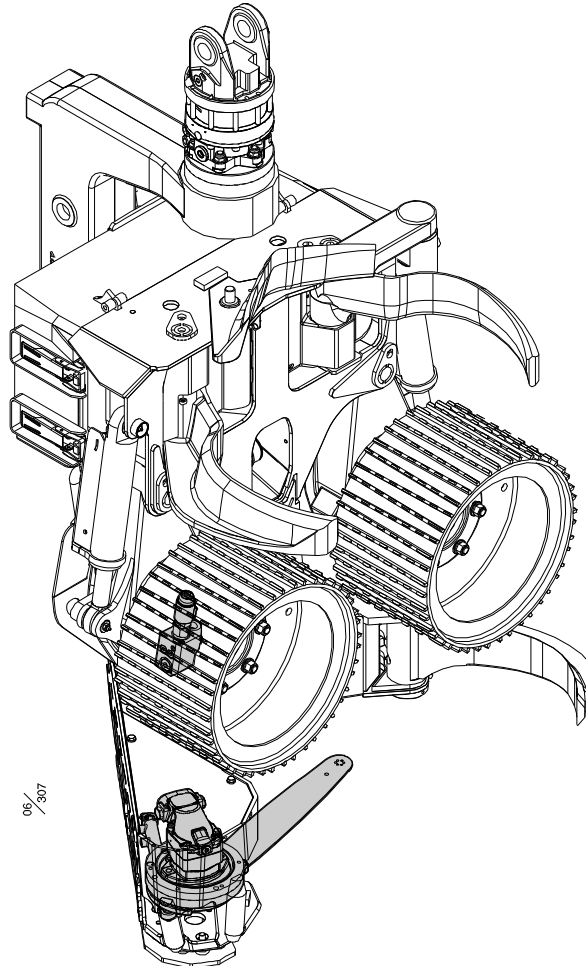

Log Max

Contents / Innehåll


Saw unit / Sågenhet.....	3
Saw hydraulics / Såghydraulik	7
Manifold / Ventilblock	9
Chain lubrication – Easy Greasy / Kedjesmörjning Easy Greasy.....	11
Easy greasy pump / Easy greasy pump.....	13

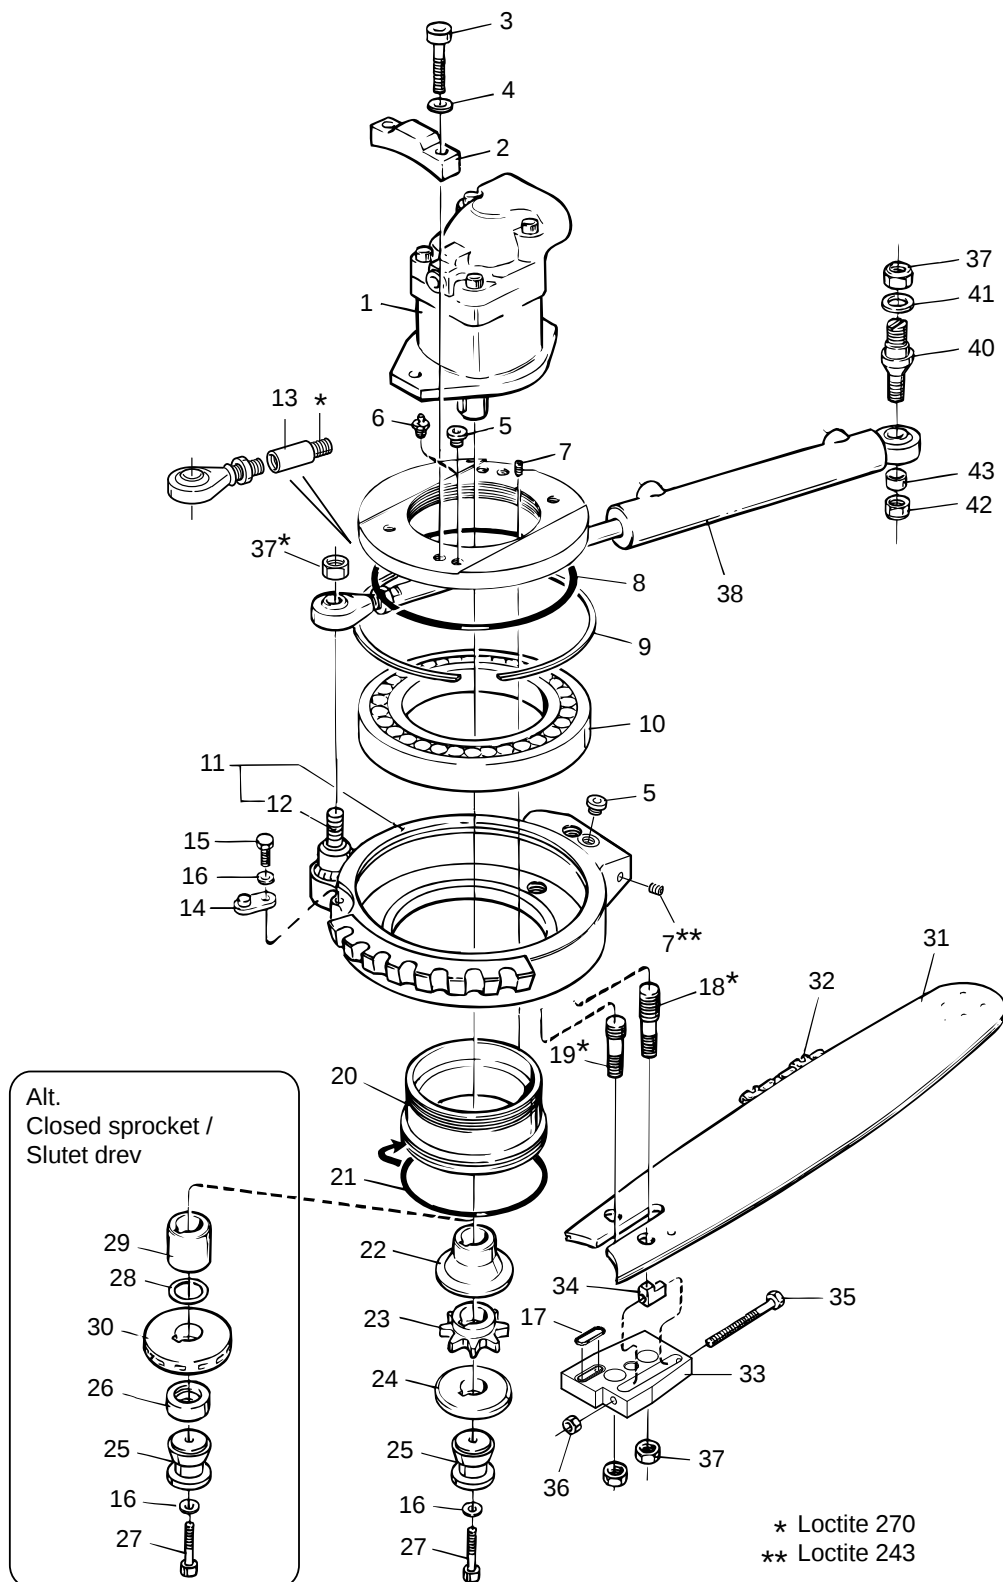

06/022

Log Max 928


Bild 06/022	SAW UNIT / SÅGENHET					Struktur 005013-ESB 005107 033082
Item / Position	Part no/ Art nr	Qty./ Antal	Serial no/ Serienr.	Description	Beskrivning	Notes/ Anmärkning
1 ¹	609000	1	120044-	Saw motor	Sågmotor	F11-10
	010499 ¹	1	- " -	Seal kit	Packningssats	
	554007 ¹	1	- " -	Seal	P-box	
	554019 ¹	1	- " -	Spline	Axelkil	
2	010100	2	- " -	Bracket	Fäste	
3	501092	4	- " -	Screw	Skruv	MC6S M10x40 12.9
4	503057	4	- " -	Washer	Bricka	M10 Nordlock
5	601000	3	- " -	Hex plug	Insexplugg	1/8" R
6	625000	1	- " -	Grease nipple	Smörjnippel	KR 1/8" R
7	513003	2	- " -	Screw	Skruv	MS6SS M5x8
8	543153	1	- " -	O-ring	O-ring	152.07x2.62
9	517001	1	- " -	Circlip	Låsring	SB 170
10	508002	1	- " -	Bearing	Kullager	16022
11 ²	011692	1	- " -	Saw bracket	Svärdfäste	
12	011695 ²	1	- " -	Pin	Axeltapp	
13	011185	1	- " -	Extender	Förlängare	
14	011169	1	- " -	Magnetic flag	Magnetflagga	
15	500023	1	- " -	Screw	Skruv	M6S M6x16 8.8 FZB
16	503065	2	- " -	Washer	Bricka	M6 Nordlock
17	540014	1	- " -	O-ring	O-ring	17.1x1.6
18	011671	1	- " -	Screw	Skruv	L= 53 mm
19	011670	1	- " -	Screw	Skruv	L= 48 mm
20	011597	1	- " -	Centerpiece	Centrumtapp	
21	543002	1	- " -	O-ring	O-ring	114.5x3.0
22	010093	1	- " -	Chain guide	Kedjestyrning	Upper / Övre
23	010094	1	- " -	Sprocket	Kedjehjul	
24	010095	1	- " -	Chain guide	Kedjestyrning	Lower / Nedre
25	011225	1	- " -	Chain catcher	Kedjefångare	
26	010679	1	- " -	Spacer	Distans	Lower / Nedre
27	501050	1	- " -	Screw	Skruv	MC6S M6x35 12.9
¹ Included in Saw motor / ¹ Ingår i Sågmotor ² Included in Saw bracket / ² Ingår i Svärdfäste						

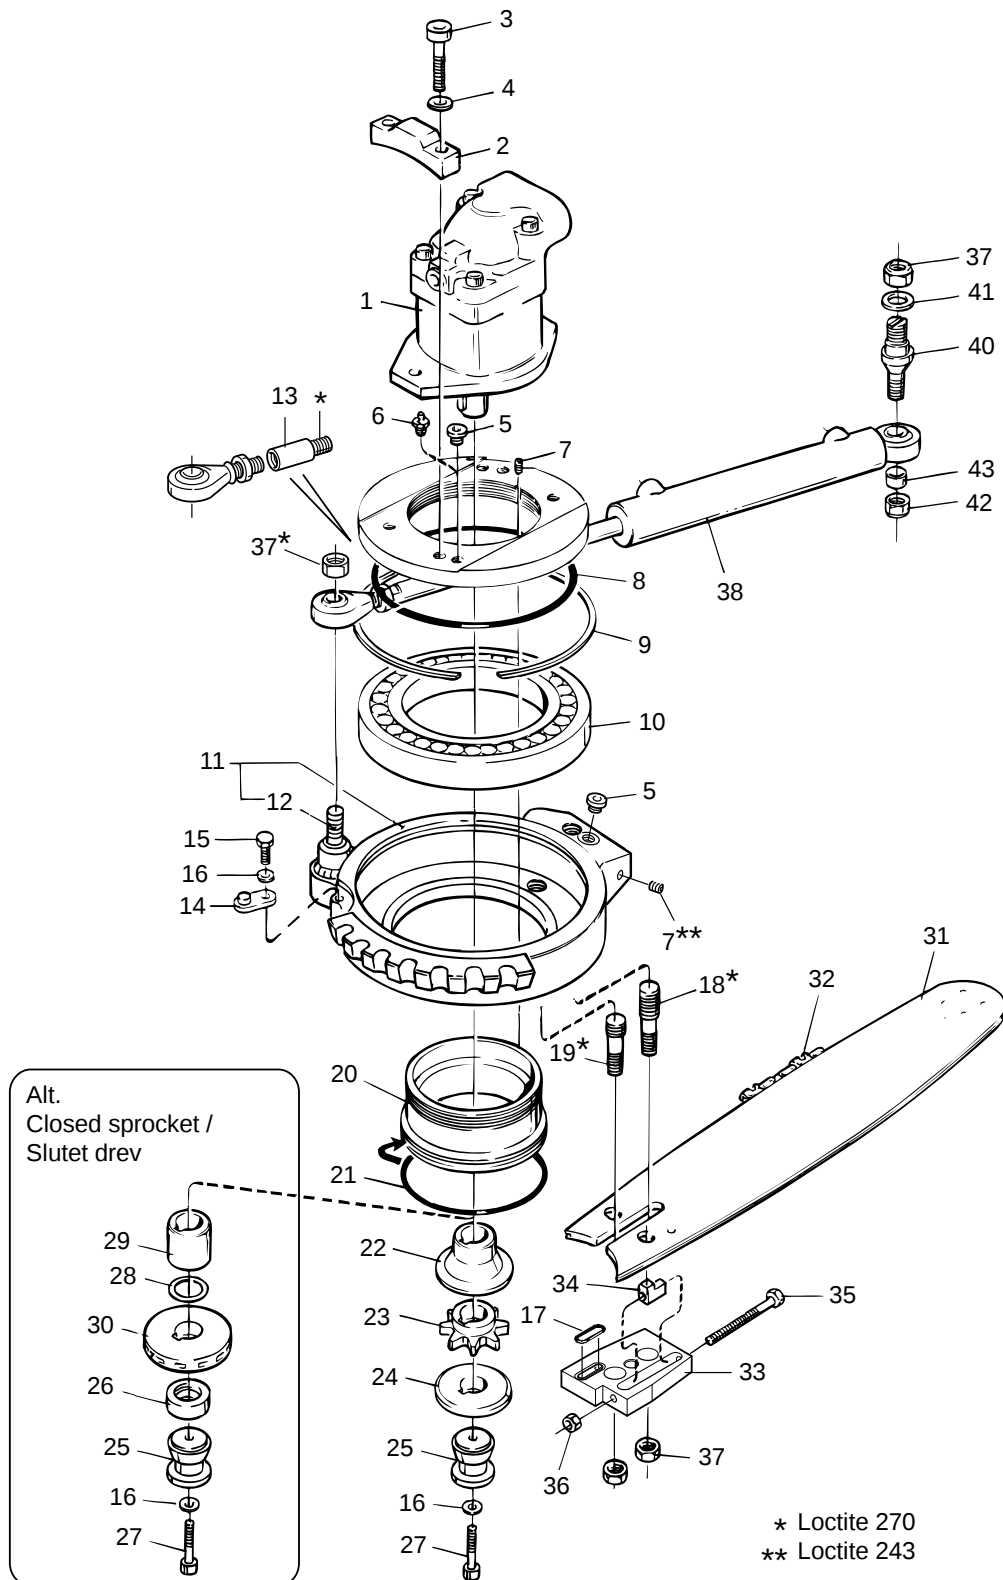

06/022

Log Max 928


Bild 06/022	SAW UNIT / SÅGENHET					Struktur 005013-ESB 005107 033082
Item / Position	Part no/ Art nr	Qty./ Antal	Serial no/ Serienr.	Description	Beskrivning	Notes/ Anmärkning
28	549212	Req / Erf	120044-	Shim	Shims	20 – 0.5 mm
	549213	Req / Erf	- " -	Shim	Shims	20 – 1.0 mm
29	010678	1	- " -	Spacer	Distans	Upper / Övre
30	549102	1	- " -	Sprocket	Kedjedrev	F11-10/9
31	549418-048	1	- " -	Saw bar	Svärd	18H 48CM
32	549018-058	1	- " -	Saw chain	Sågkedja	18H 58DL
33	017547	1	- " -	Thrust plate	Tryckbricka	
34	010098	1	- " -	Adjuster lug	Justerklack	
35	505016	1	- " -	Screw	Skruv	MC6S M6x85 10.9
36	502053	1	- " -	Nut	Mutter	M6 Locking Low / Låg
37	502705	4	- " -	Nut	Mutter	M16 Locking Low / Låg
38	011184	1	- " -	Hydraulic cylinder	Hydraul- cylinder	Ø25/16 – 139
40	010169	1	- " -	Pin	Axel	Ø25 L= 84 mm
41	503013	1	- " -	Washer	Bricka	BRB FZB 17x30x3.0
42	502056	1	- " -	Nut	Mutter	M12 Locking Low / Låg
43	010170	1	- " -	Spacer	Distans	

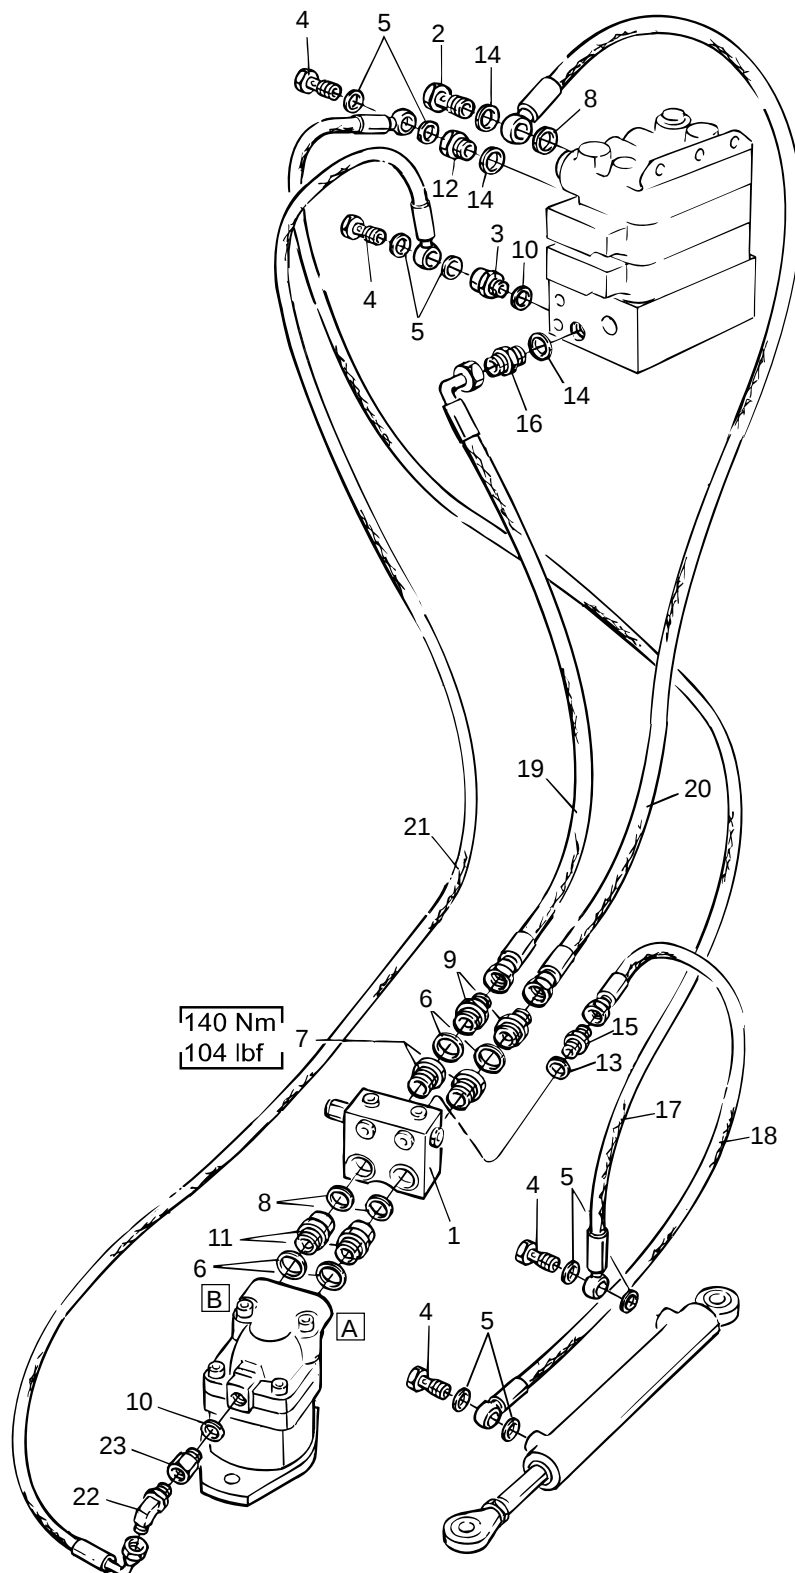

06/024

Log Max 928 Saw hydraulics

Bild 06/024	SAW HYDRAULICS / SÅGHYDRAULIK					Struktur 005107
Item / Position	Part no/ Art nr	Qty./ Antal	Serial no/ Serienr.	Description	Beskrivning	Notes/ Anmärkning
1	011761	1	120044-	Manifold	Ventilblock	
2	601062	1	- " -	Banjo screw	Banjoskruv	G 1/2"
3	602055	1	- " -	Adapter	Adapter	R 1/4" – R 1/4" UF – IF
4	601060	4	- " -	Banjo screw	Banjoskruv	R 1/4"
5	601200	8	- " -	Copper seal	Kopparbricka	13x19x1.5
6	601104	4	- " -	Bonded seal	Tredobricka	3/4"
7	013345	2	- " -	Banjo screw	Banjoskruv	R 1/2"
8	602113	3	- " -	Seal ring	Tätningsring	1/2"
9	601037	2	- " -	Adapter	Adapter	R 1/2" UF – R 3/4" UF
10	601102	2	- " -	Bonded seal	Tredobricka	3/8"
11	601053	2	- " -	Adapter	Adapter	R 3/4" UF – R 1/2" IF
12	602059	1	- " -	Adapter	Adapter	R 1/2" – R 1/4" UF – IF
13	601101	1	- " -	Bonded seal	Tredobricka	1/4"
14	601103	3	- " -	Bonded seal	Tredobricka	1/2"
15	601028	1	- " -	Adapter	Adapter	R 1/4" UF – R 1/4" UF
16	601036	1	- " -	Adapter	Adapter	R 1/2" UF – R 1/2" UF
17	641428	1	- " -	Hydraulic hose	Hydraulslang	
18	641439	1	- " -	Hydraulic hose	Hydraulslang	
19	641425	1	- " -	Hydraulic hose	Hydraulslang	
20	641424	1	- " -	Hydraulic hose	Hydraulslang	
21	641457	1	- " -	Hydraulic hose	Hydraulslang	
22	602020	1	- " -	Elbow	Vinkeladapter	R 1/4" UF – UF Adjustable / Ställbar
23	602052	1	- " -	Adapter	Adapter	R 3/8" UF – R 1/4" IF

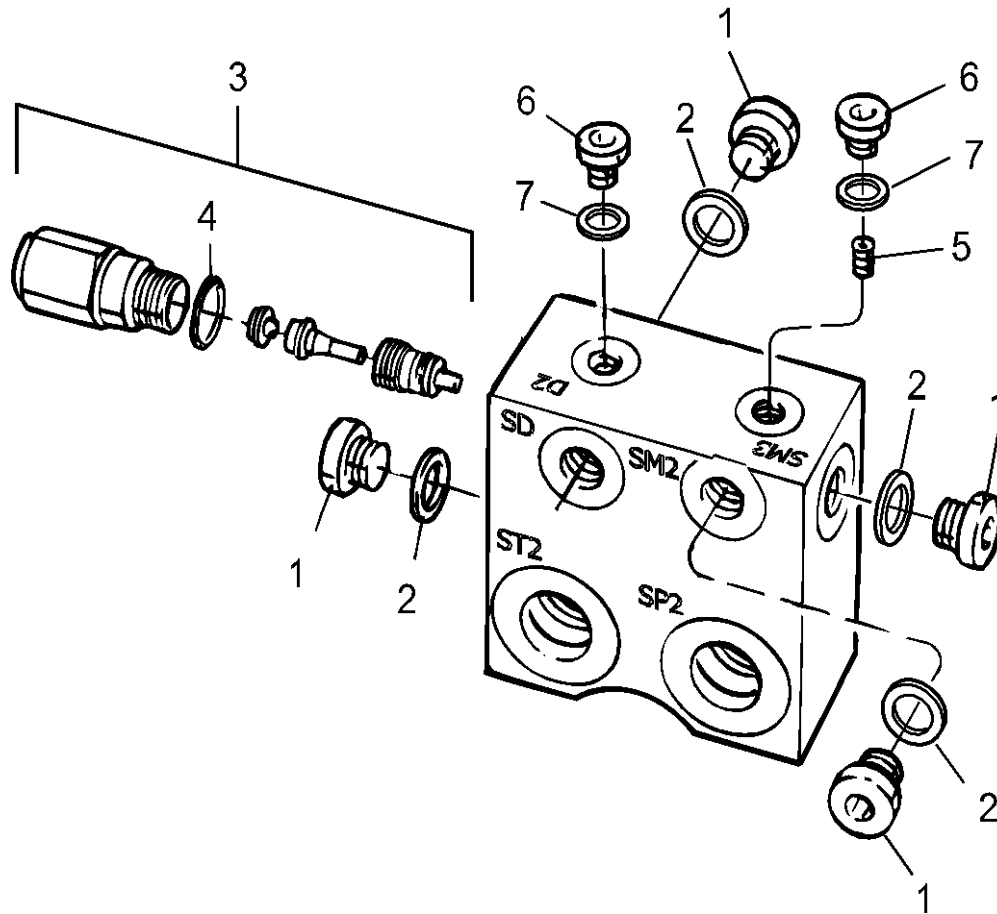

06/025

Log Max 928 Manifold saw

Bild 06/025	MANIFOLD / VENTILBLOCK					Struktur 011761
Item / Position	Part no/ Art nr	Qty./ Antal	Serial no/ Serienr.	Description	Beskrivning	Notes/ Anmärkning
1	601001	4	120044-	Hex plug	Insexplugg	1/4" R
2	601101	4	- " -	Bonded seal	Tredobricka	1/4"
3 ¹	619005	1	- " -	Valve cmpl.	Ventil kmpl.	14 – 70 bar PLD
4	540070 ¹	1	- " -	O-ring	O-ring	13.3x2.4
5	613013	1	- " -	Orifice	Strypskruv	M6 – 0.9 mm
6	601000	2	- " -	Hex plug	Insexplugg	1/8" R
7	601100	2	- " -	Bonded seal	Tredobricka	1/8"
¹ Included in Valve cmpl. / ¹ Ingår i Ventil kmpl.						


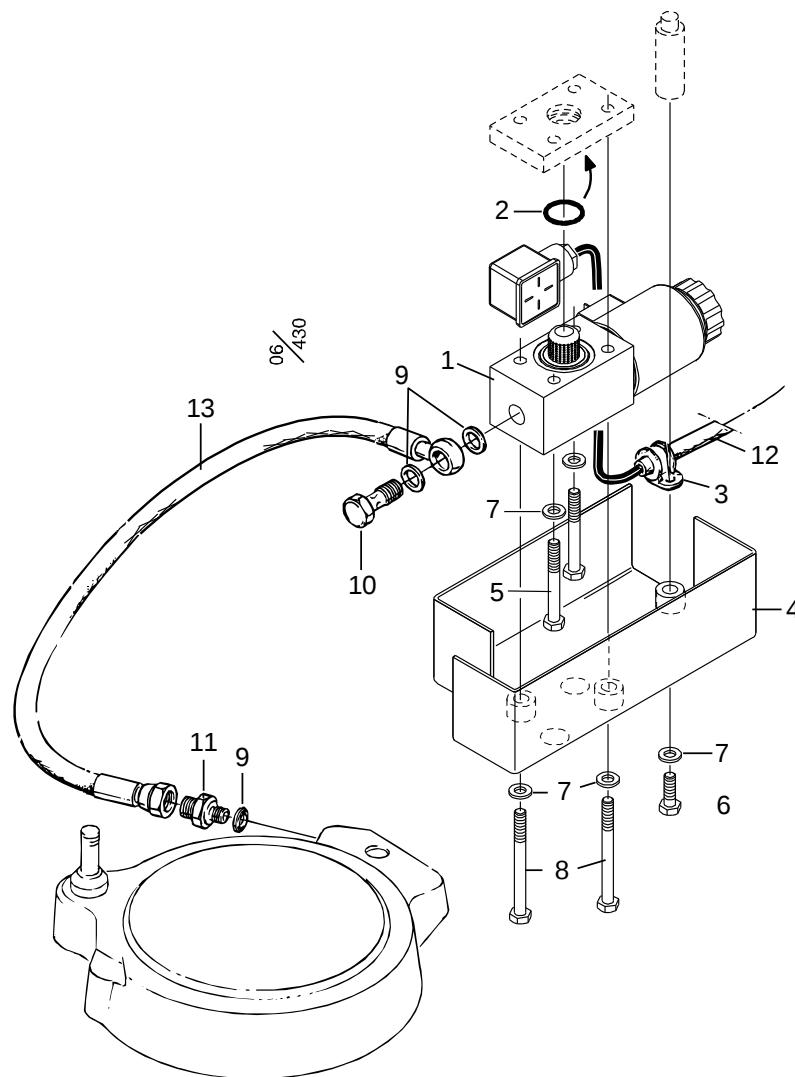


Bild 06/430	CHAIN LUBRICATION – EASY GREASY / KEDJESMÖRJNING EASY GREASY					Struktur 005014-24
Item / Position	Part no/ Art nr	Qty./ Antal	Serial no/ Serienr.	Description	Beskrivning	Notes/ Anmärkning
1	033027	1	120044-	Pump cml.	Pump kmpl.	
2	540074	1	- " -	O-ring	O-ring	17.3x2.4
3	622061	1	- " -	Clamp	Klamma	
4	015188	1	- " -	Cover	Skyddskåpa	
5	501052	2	- " -	Screw	Skruv	MC6S M6x45 12.9
6	501048	1	- " -	Screw	Skruv	MC6S M6x25 12.9
7	503065	5	- " -	Washer	Bricka	M6 Nordlock
8	501054	2	- " -	Screw	Skruv	MC6S M6x55 12.9
9	601101	3	- " -	Bonded seal	Tredobricka	1/4"
10	601060	1	- " -	Banjo screw	Banjoskruv	R 1/4"
11	601028	1	- " -	Adapter	Adapter	R 1/4"UF – R 1/4" UF
12	641441	1	- " -	Hydraulic hose	Hydraulslang	
13	640202	1	- " -	Hydraulic hose	Hydraulslang	

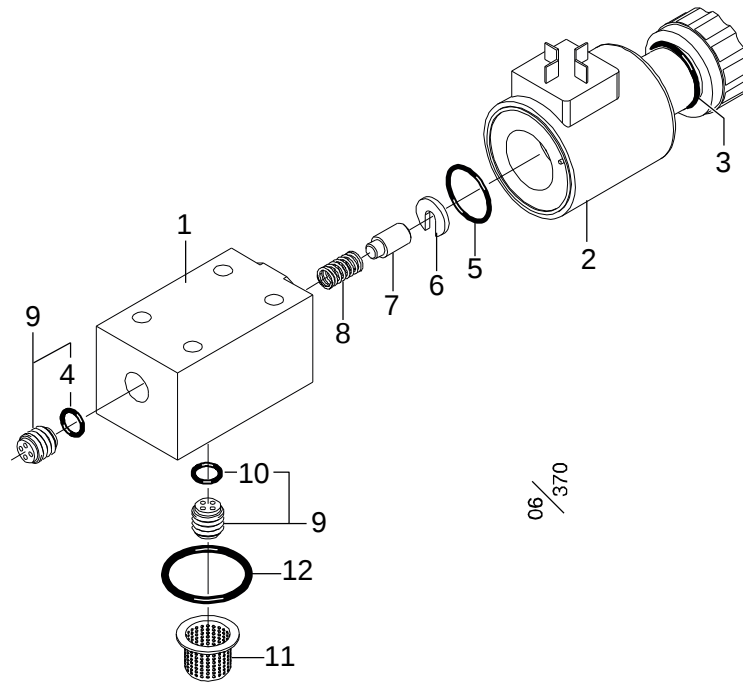

Easy Greasy

Bild 06/370	EASY GREASY PUMP / EASY GREASY PUMP					Struktur 033027
Item / Position	Part no/ Art nr	Qty./ Antal	Serial no/ Serienr.	Description	Beskrivning	Notes/ Anmärkning
1	016282	1	120044-	Pump housing	Pumphus	
2 ¹	613062	1	- " -	Solenoid	Magnetspole	24V
3	540120 ¹	1	- " -	O-ring	O-ring	21.82x3.53
4	543057 ²	1	- " -	O-ring	O-ring	9.0x1.0
5	540121 ¹	1	- " -	O-ring	O-ring	17.17x1.78
6	016426	1	- " -	Spacer	Distans	
7	010897	1	- " -	Piston	Kolv	0.20 cm ³
8	526005	1	- " -	Spring	Fjäder	
9 ²	617016	2	- " -	Check valve	Backventil	
10	543013 ²	1	- " -	O-ring	O-ring	9.5x1.0
11	620302	1	- " -	Strainer	Sil	
12	543012	1	- " -	O-ring	O-ring	27.6x2.4
¹ Included in Solenoid / ¹ Ingår i Magnetspole ² Included in Check valve / ² Ingår i Backventil						

**SPARE PARTS MANUAL /
RESERVDELSMANUAL**

**Chapter Contents /
Kapitel Innehåll**

2. Frame with protective cover /
Ram med skyddshuv
3. Delimbing unit /
Kvistningsenhet
4. Felling unit /
Fällenhhet
5. Feeding unit /
Matningsenhet
6. Saw unit /
Sågenhet
- 7. Hydraulic system /
Hydraulsystem**
8. Electrical system /
Elsystem
9. Accessories optional equipment /
Tillbehör

